


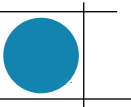
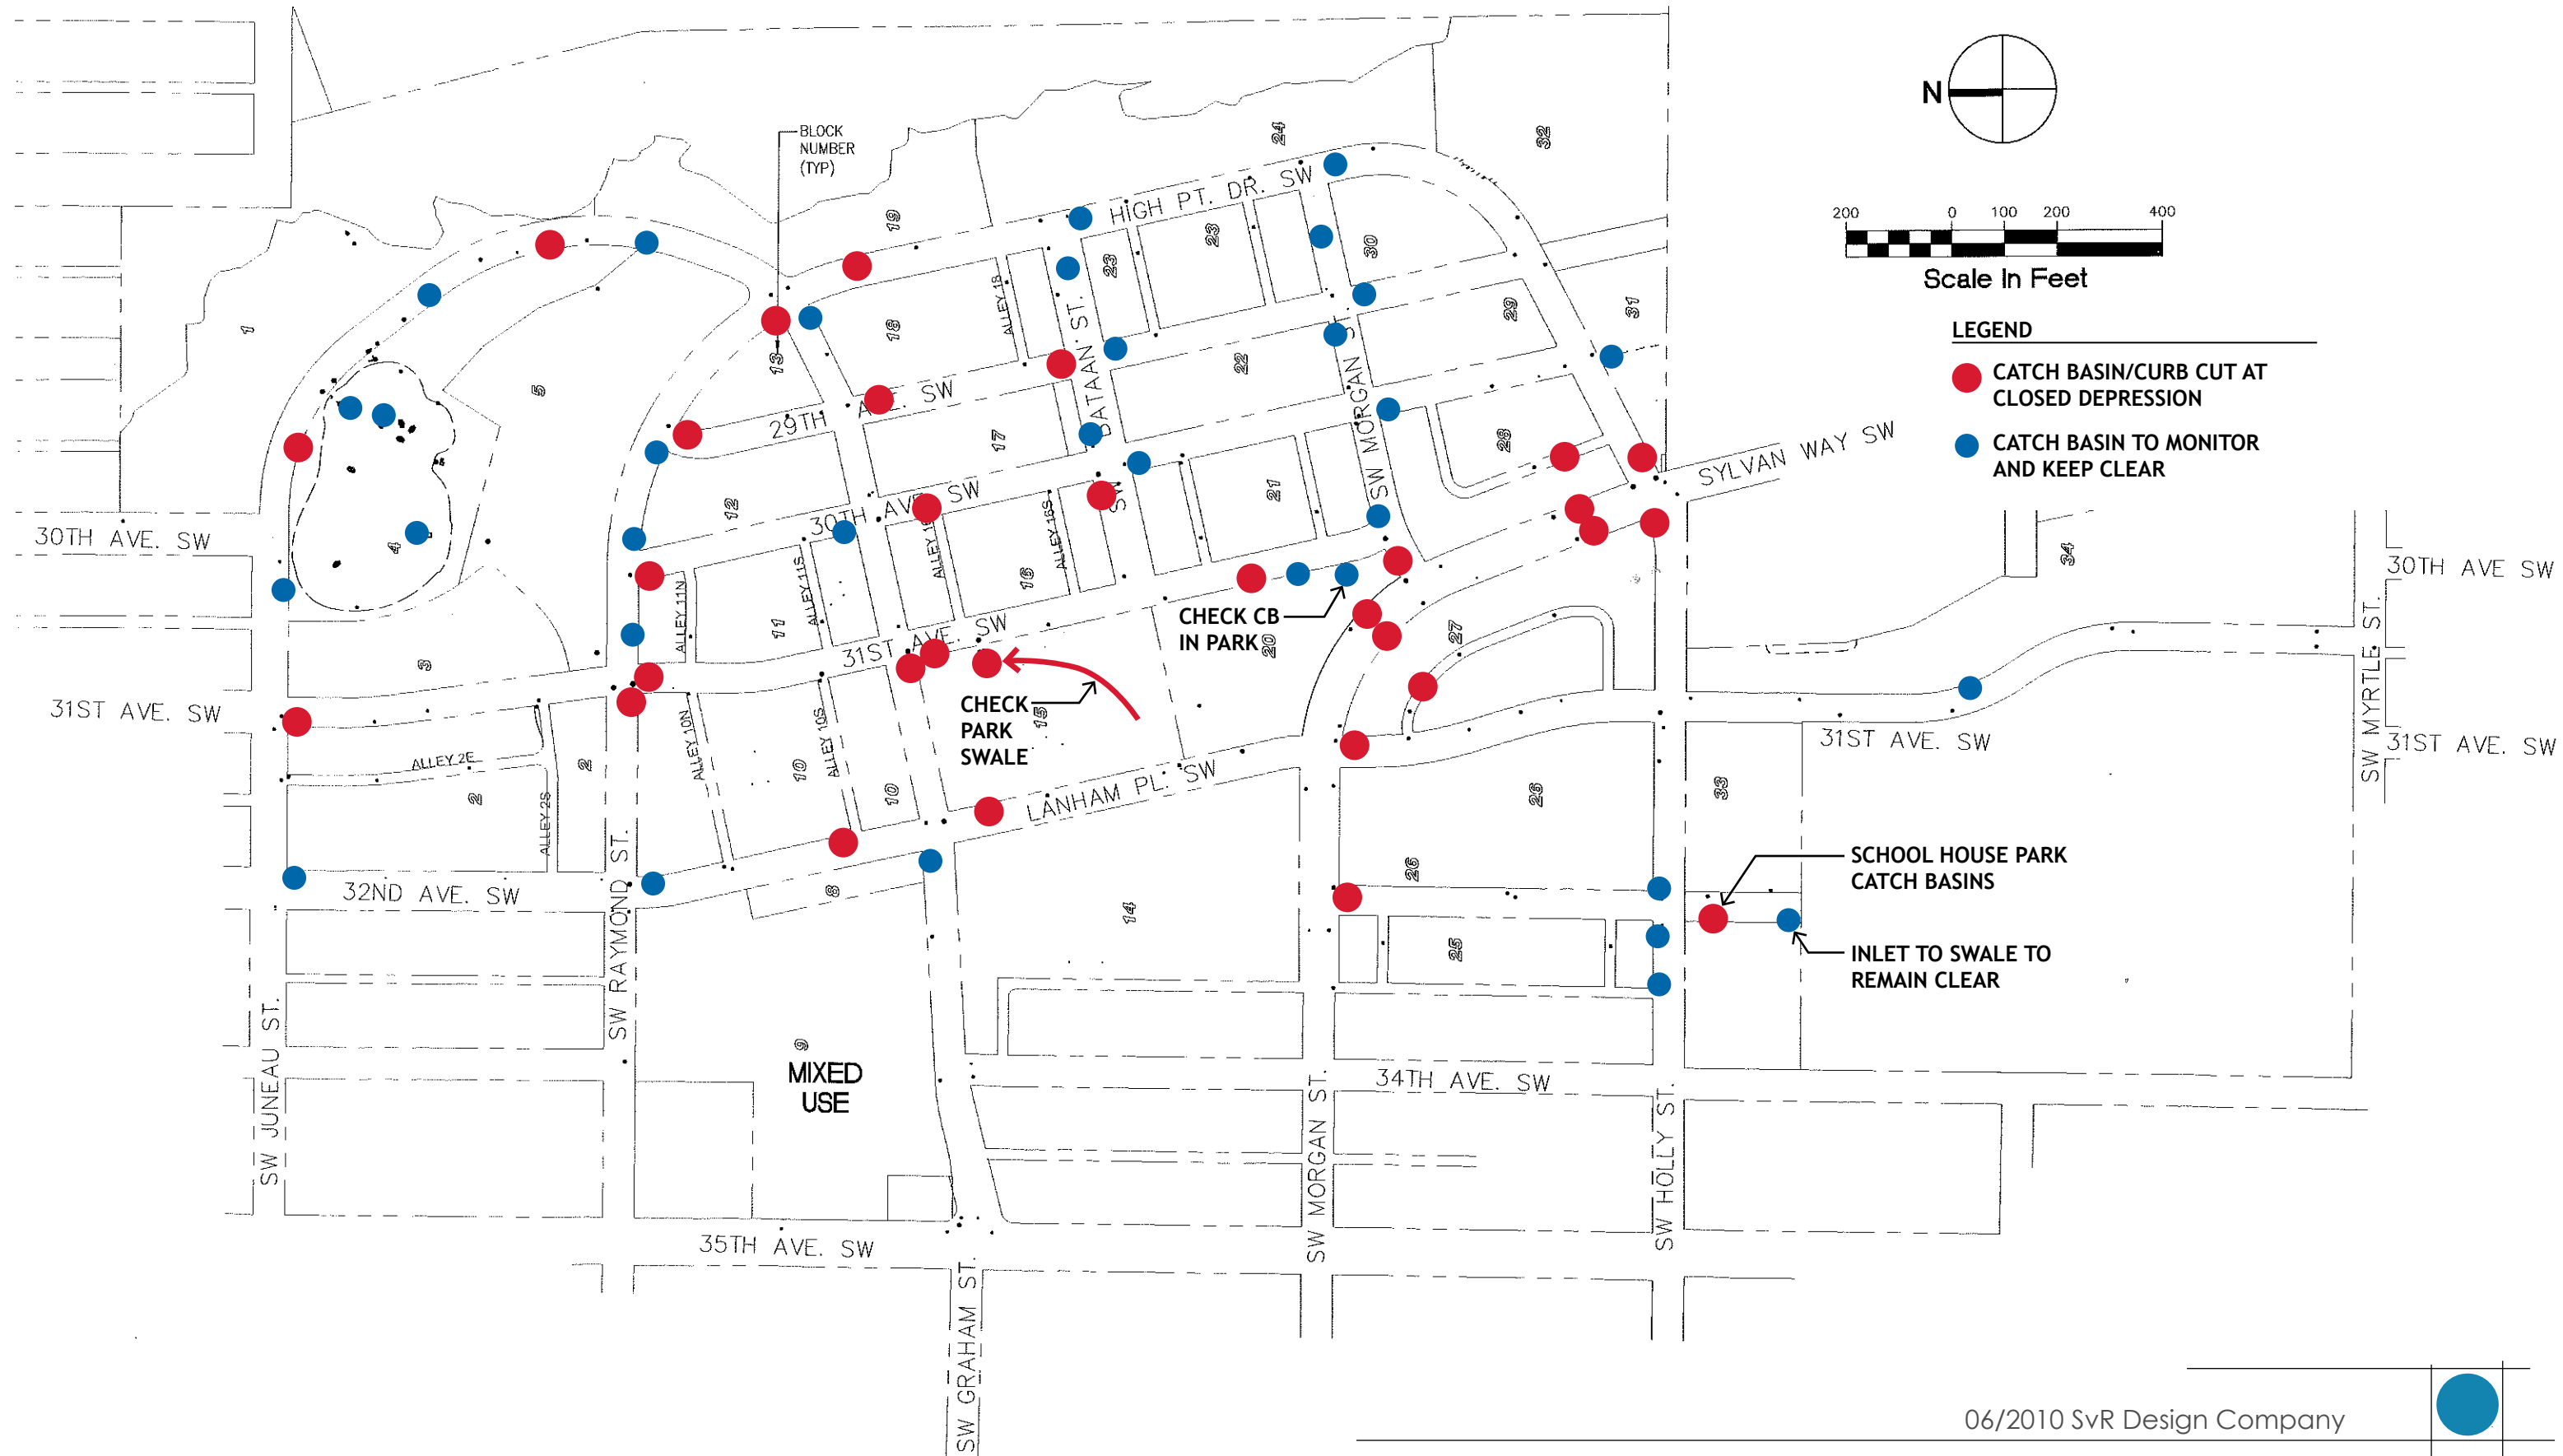
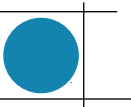


13.1 Fall Maintenance/Storm Event Priority Clearing Guide

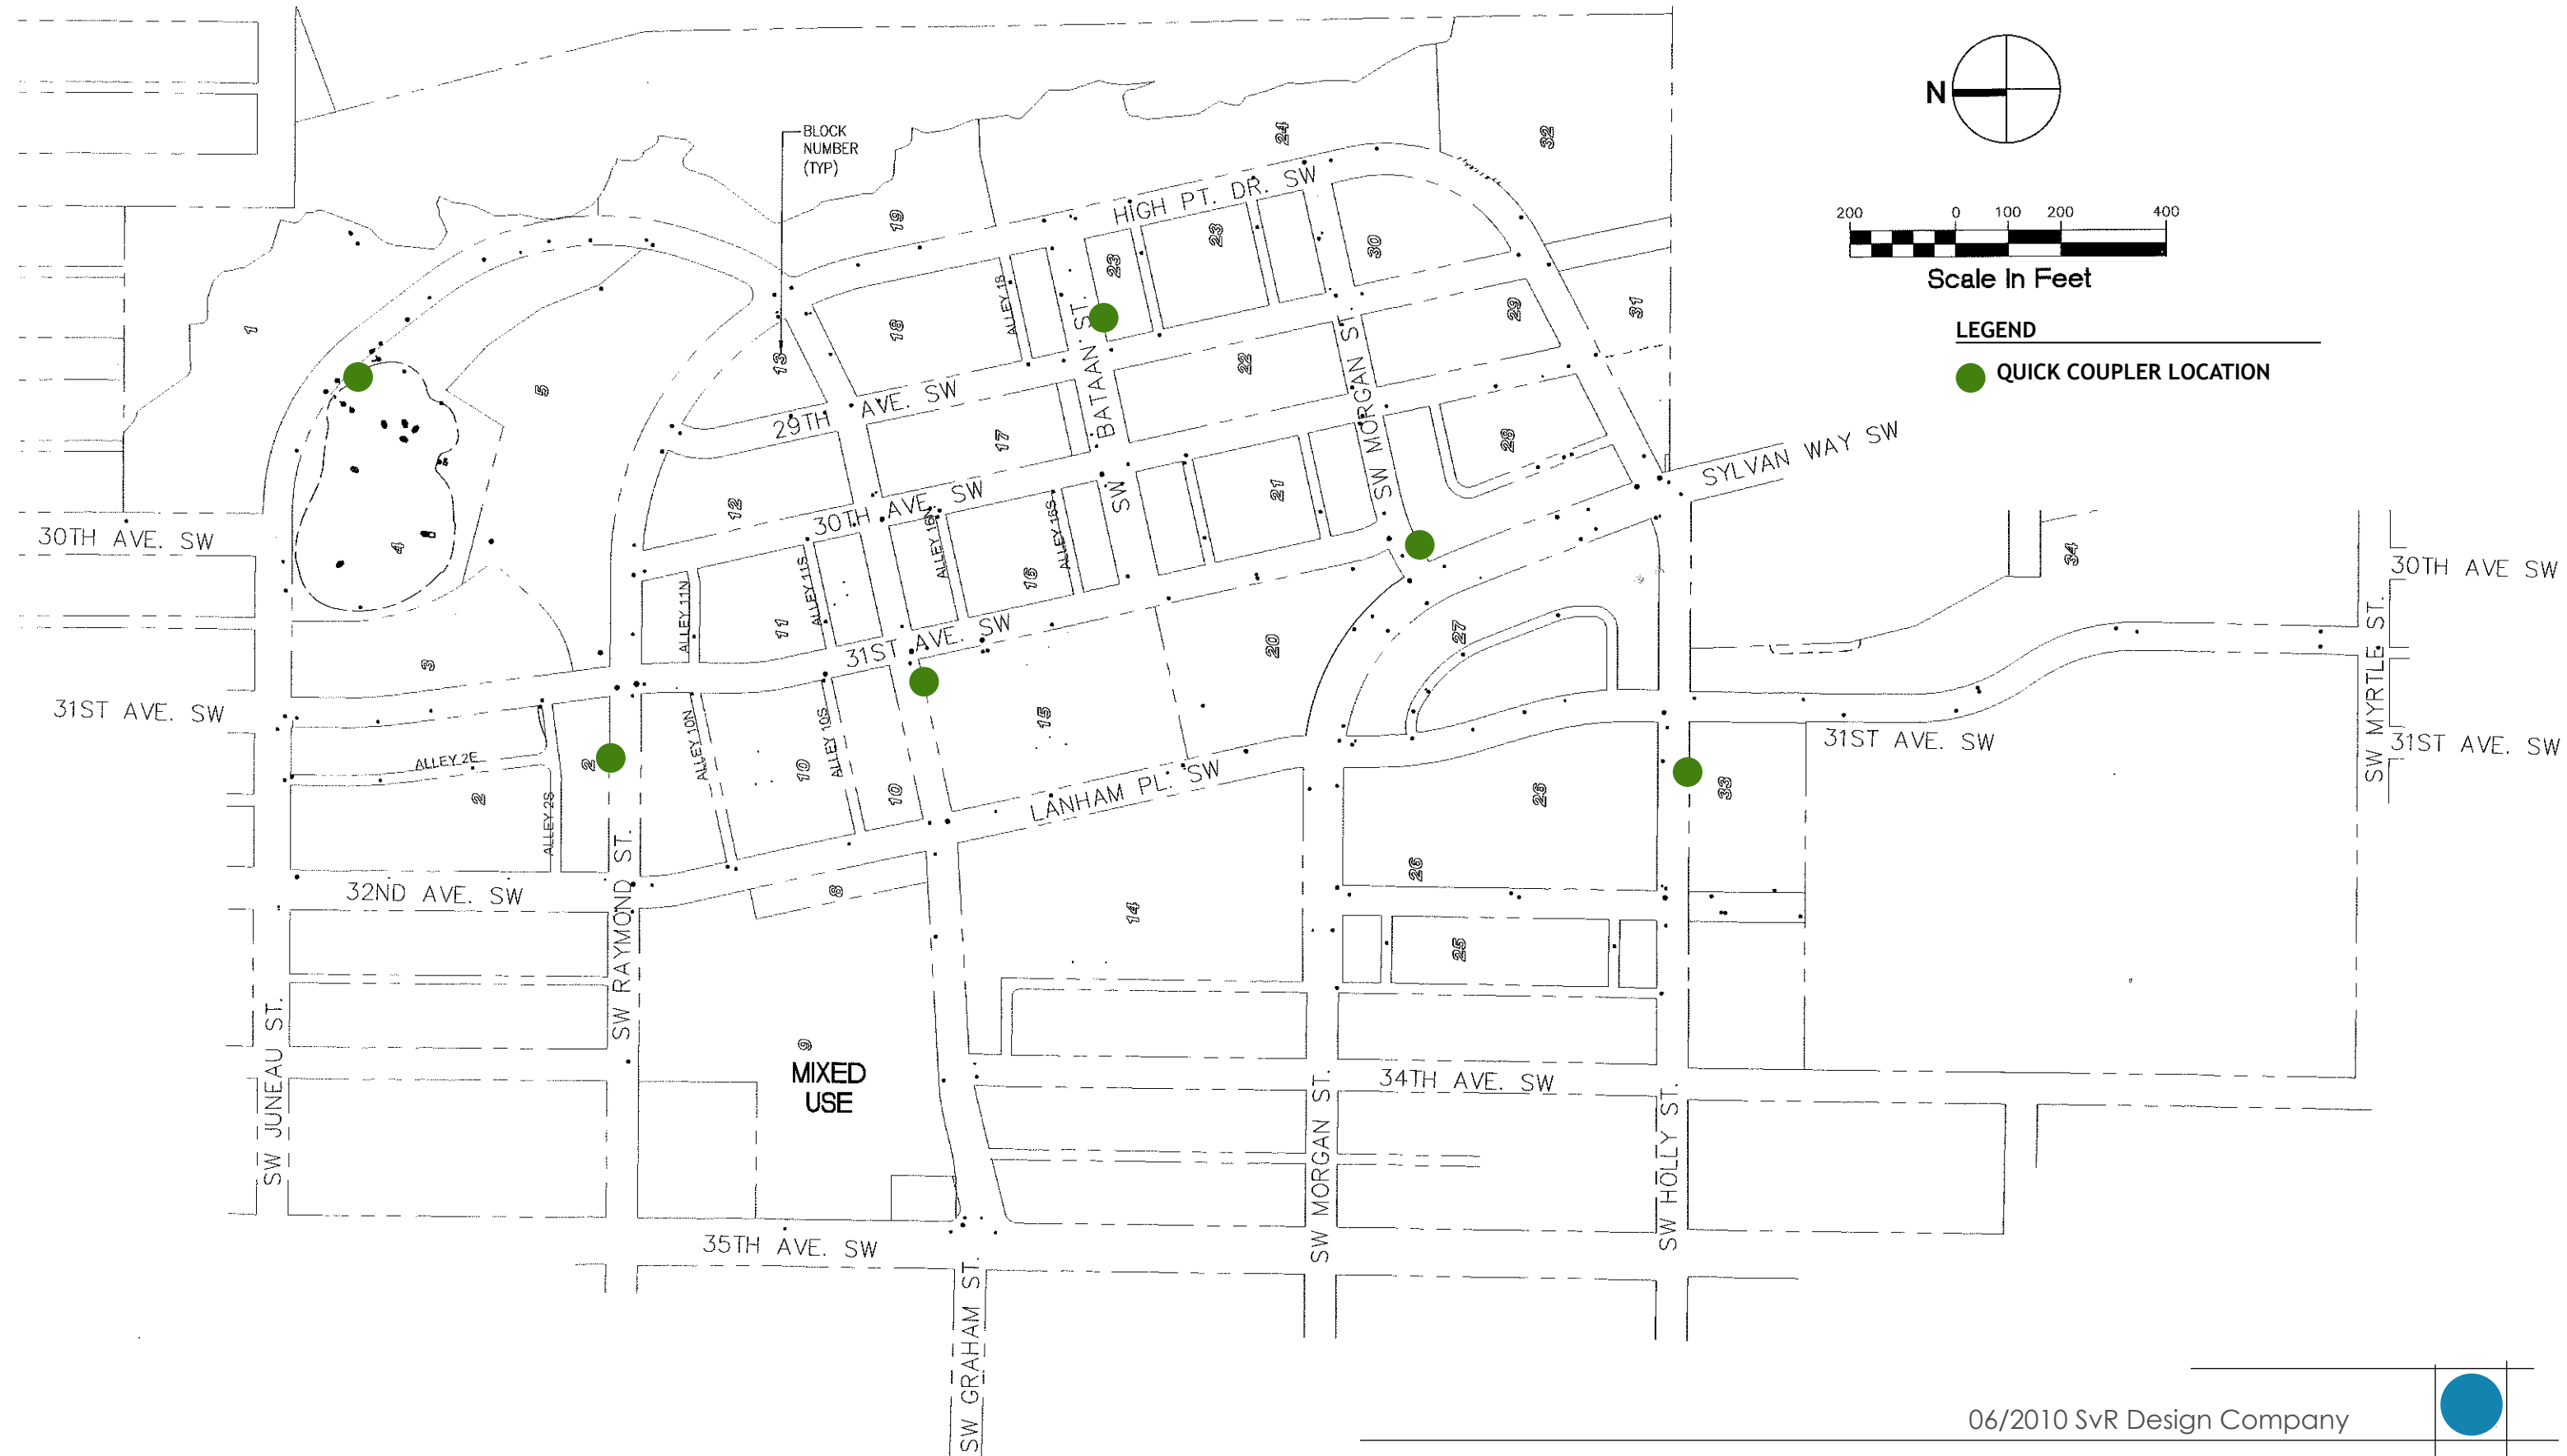

13.2 Quick Coupler Location Guide

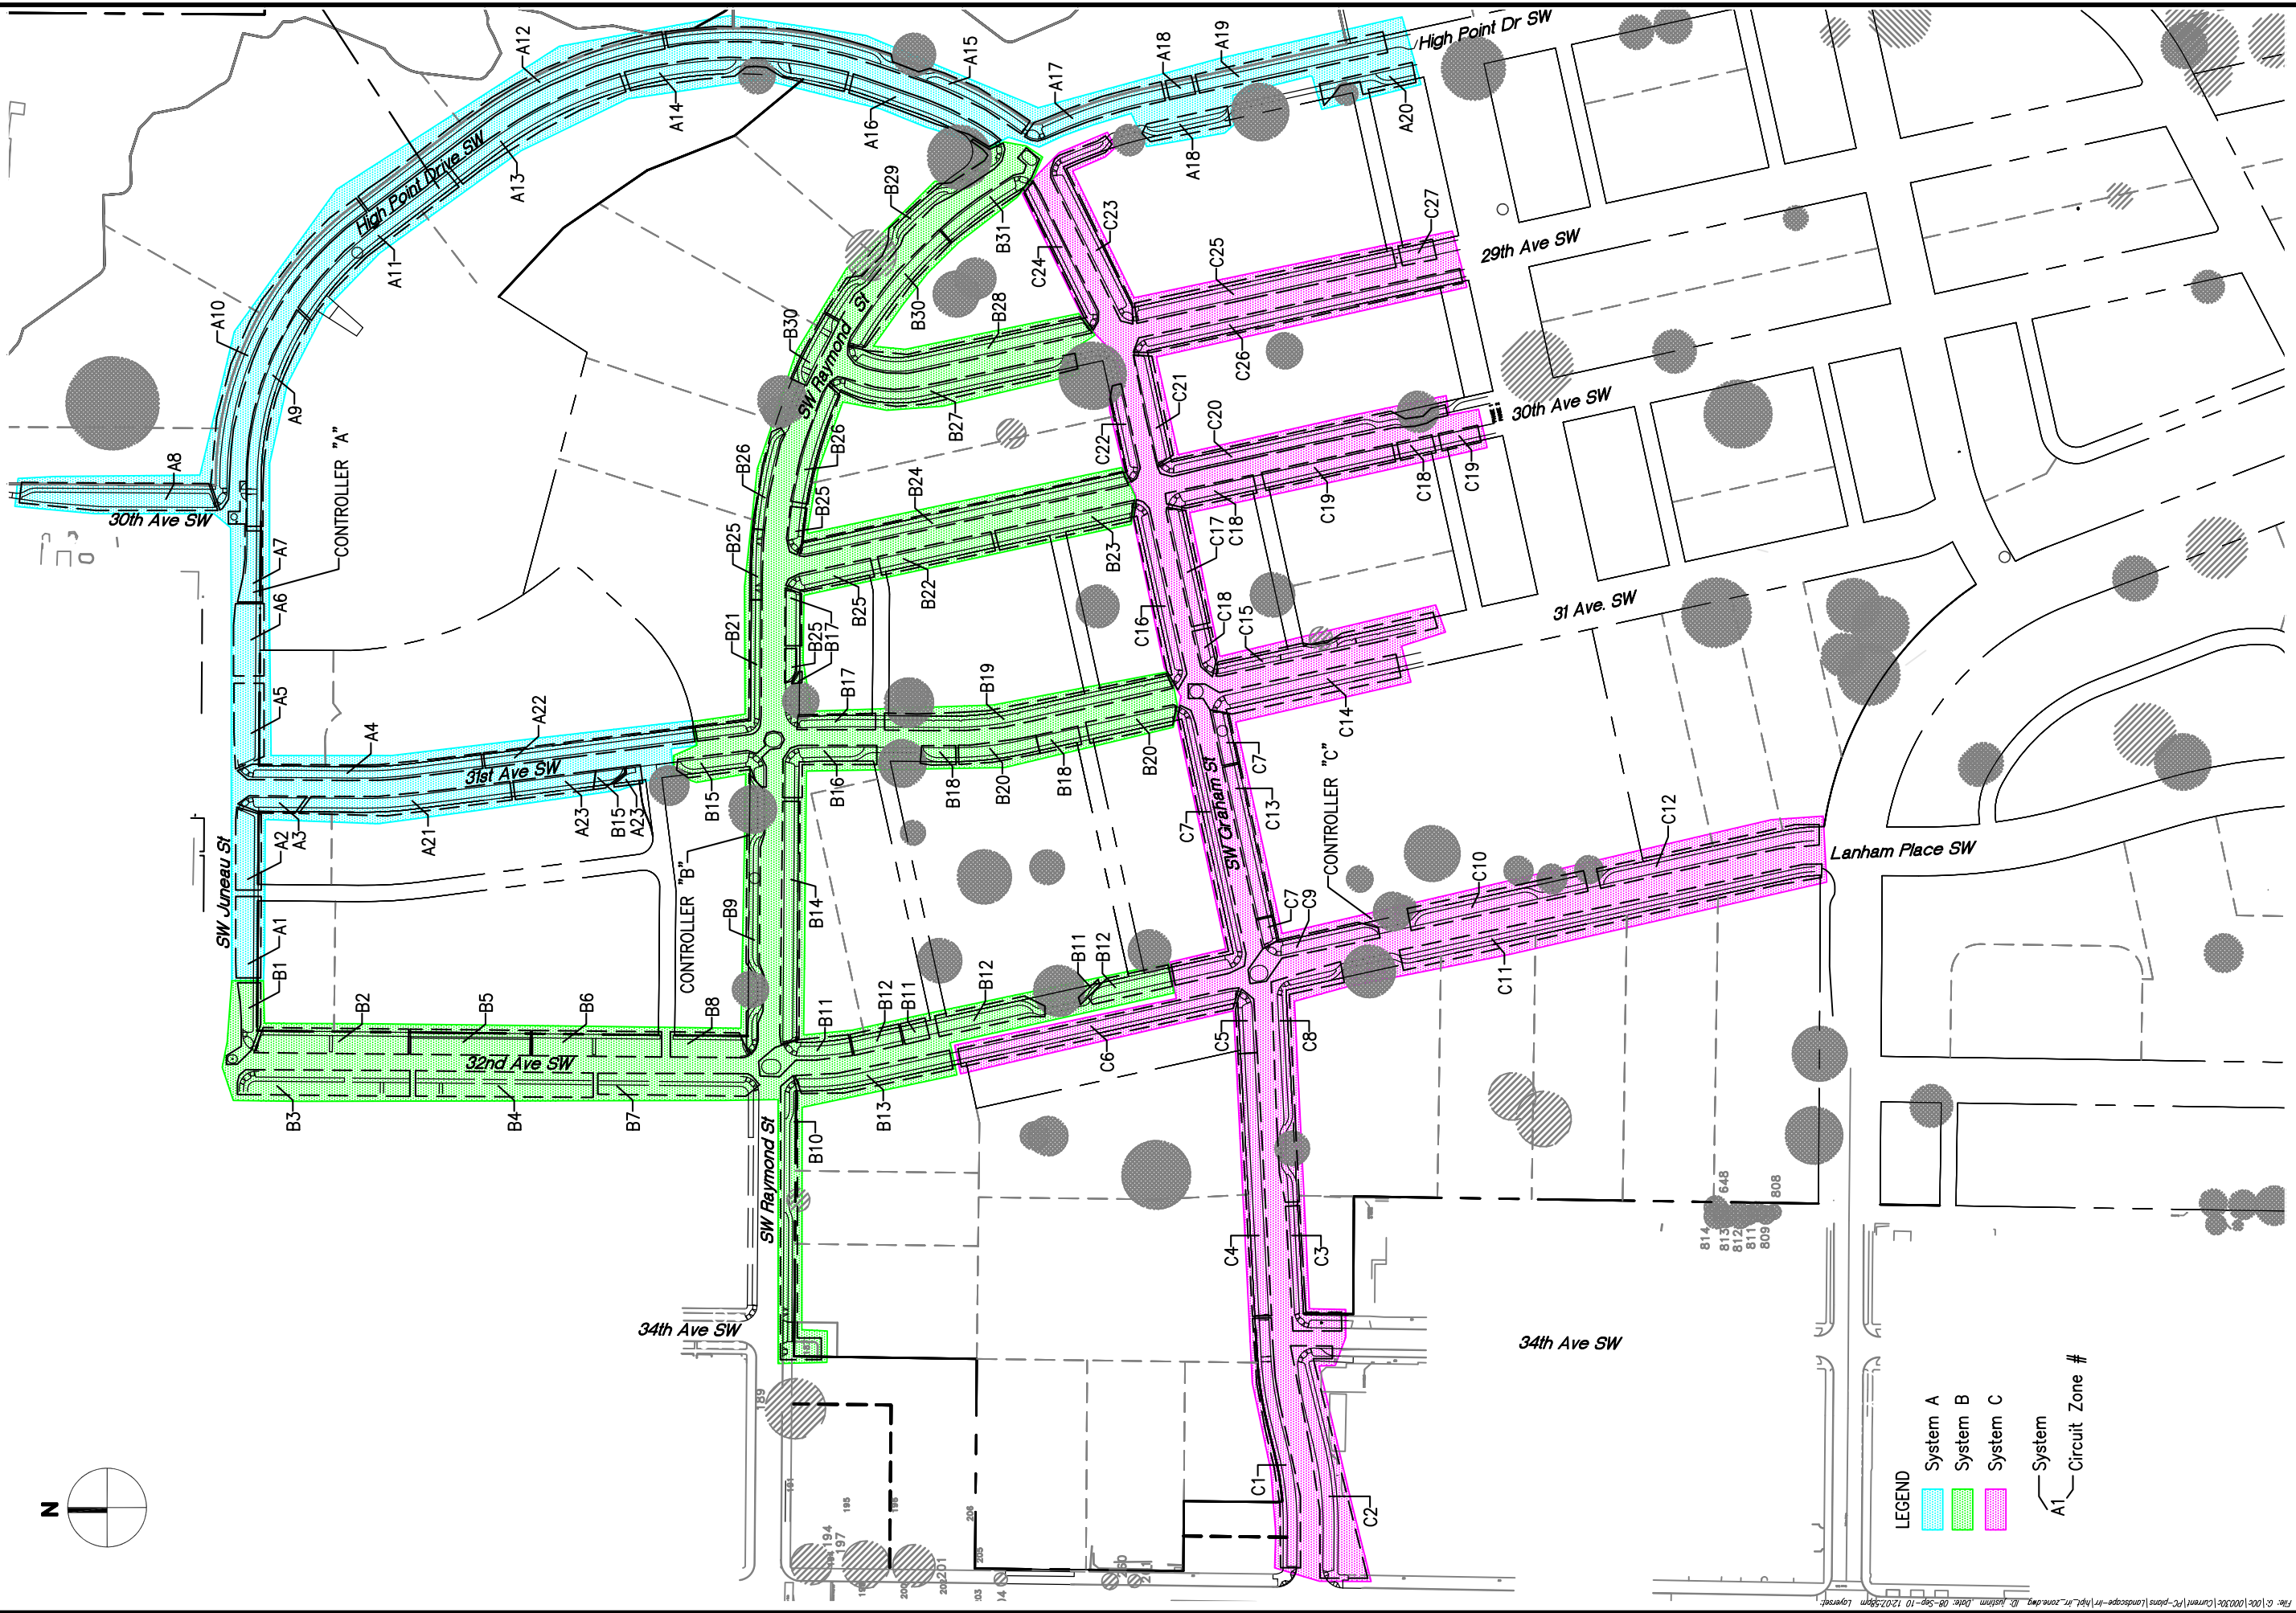

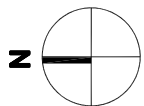

LEGEND

- System A
- System B
- System C
- System
- A1 Circuit Zone #


**HIGH POINT COMMUNITY
PHASE I IRRIGATION ZONING MAP**

Seattle, Washington

SvR DESIGN COMPANY
 1205 SECOND AVE., SUITE 200
 SEATTLE, WA 98101
 T 206.223.0326
 F 206.223.0125
 WWW.SVRDESIGN.COM

Date: 2007-09-05
 Drawn: JW
 Chk'd: MS
 Scale: NTS

File: c:\001\000308\current\pc-plans\landscape\h\hpl\rr\zone.dwg ID: svr\m Date: 08-Sep-10 12:02:59pm Layer: svr

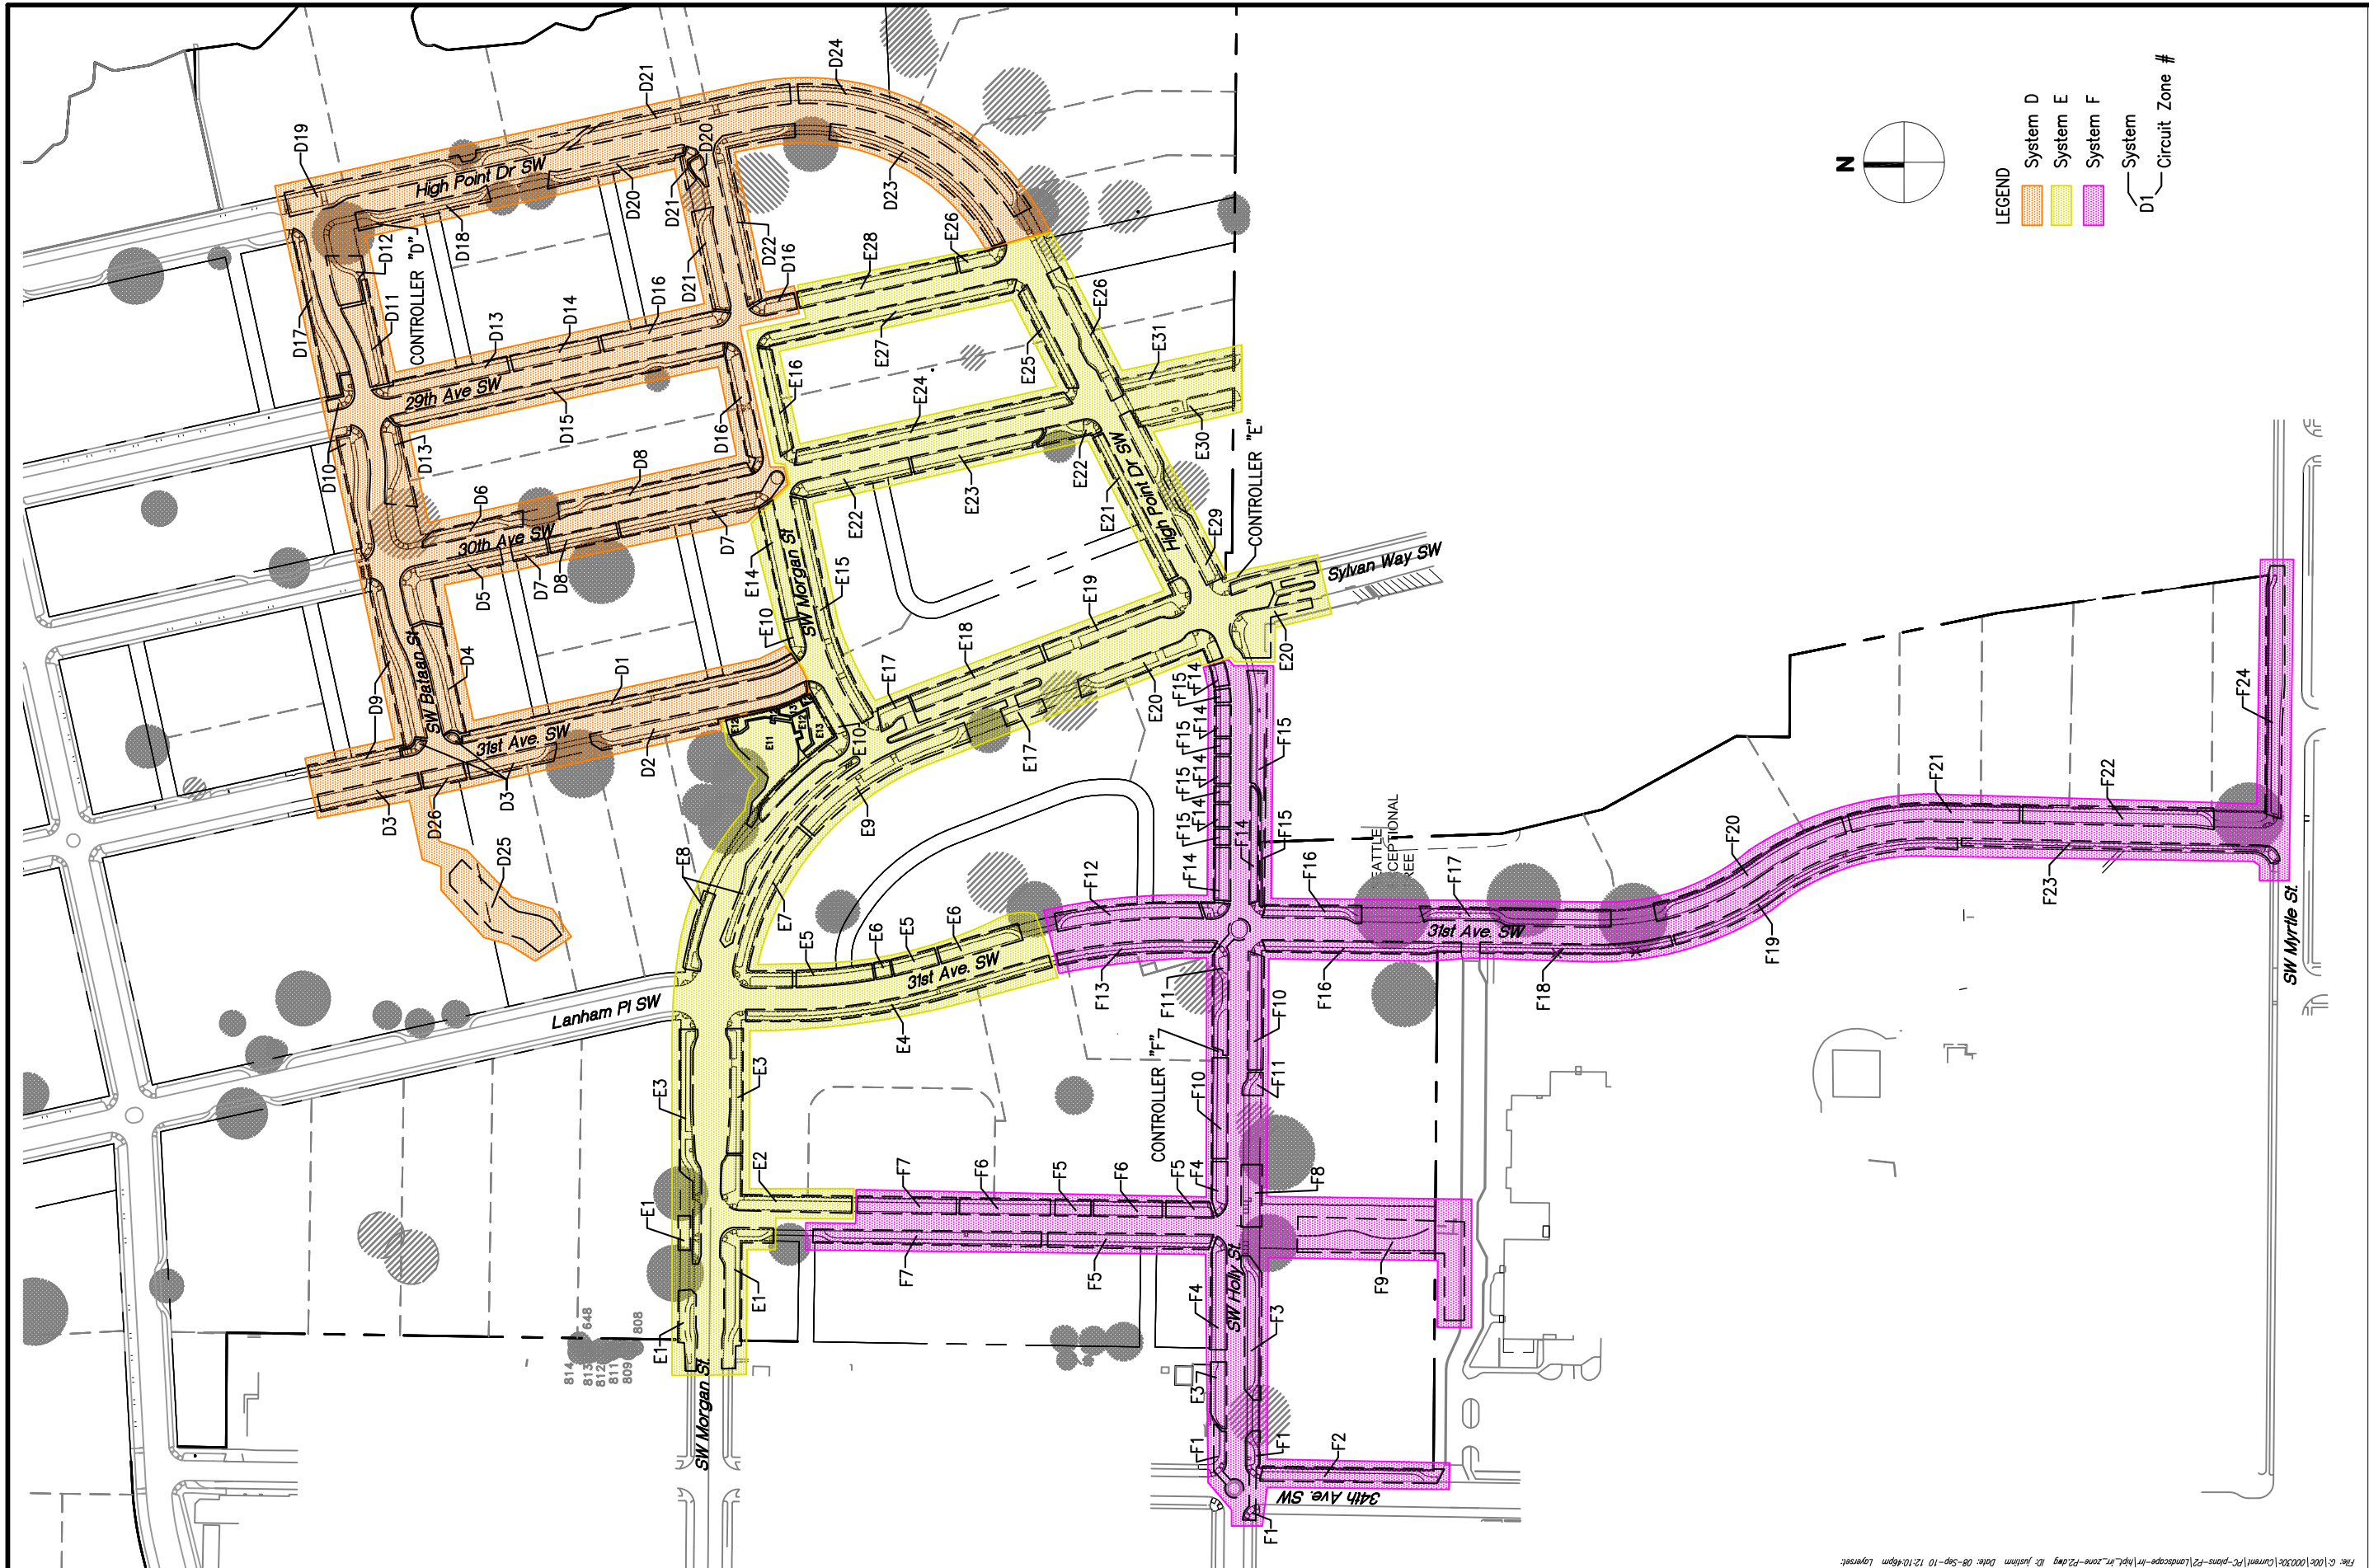

HIGH POINT COMMUNITY PHASE II IRRIGATION ZONING MAP

Seattle, Washington

svr DESIGN COMPANY
 1205 SECOND AVE. SUITE 200
 SEATTLE, WA 98101
 T 206.238.0326
 F 206.238.0125
 WWW.SVRDESIGN.COM

Date: 2010-09-01
 Drawn: JM
 Chk'd: MS
 Scale: NTS

File: C:\02\000202\Current\PC-plans\F2\landscape\In\HPL\ir_rzone\F2.dwg Date: 08-Sep-10 12:10:46pm Layer: 0